

Door Access.

User Manual (Setting)

Compatible to **PT305/E50/8618** keypad panel.

1. How to get into the programming mood.

Press ##### Red LED OFF, Green LED ON then press 123456#

You success if, Red LED OFF and GREEN LED flash. And fail if, Red LED ON and Green LED OFF.

Default program password is 123456

2. How to change your Program password

Press 0 “new password” # “new password” # (number must be in 6 digit format)

3. How to change / set access password.

Press 6 (new password) # (new password) # It must be in 4 – 6 digits format.

4. How to add card continuously.

Press 1 (swipe card.....apply to unregistered card only)#

The controller will assign each registered card with individual card number.

You can directly swipe the entire card you have.

5. How to change door Access duration.

Press 503# means the duration is set to 3seconds.