



CA-6 KLED

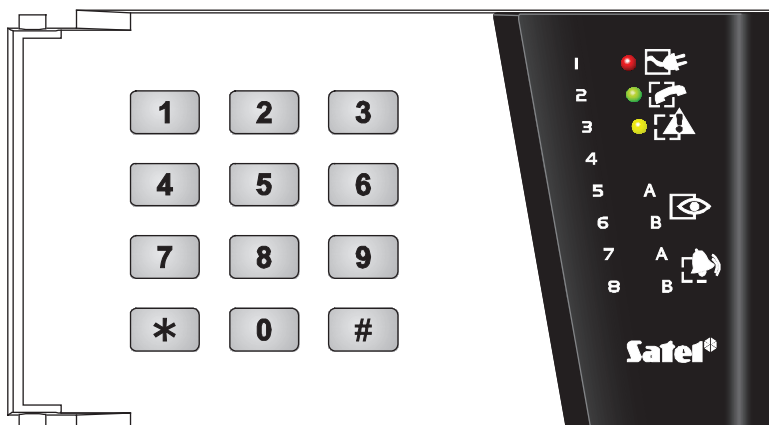

CA-6 KLED-S

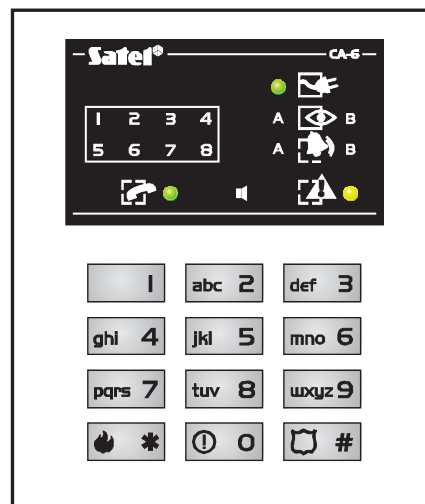

illuminated – 230 V AC mains and battery power OK

blinking – low battery

extinguished – 230 V AC power failure



illuminated – control panel occupies telephone line



blinking – alarm



illuminated – partition armed

blinking – exit delay countdown



blinking – trouble



the LED illustrates the functioning of the buzzer in the keypad

Viewing alarm log

press and hold down the **5** key for approx. 3 sec.

Viewing trouble log

press and hold down the **6** key for approx. 3 sec.

Viewing current troubles

press and hold down the **7** key for approx. 3 sec.

Arming

Disarming

Alarm clearing

[CODE]#

Quick arming

0# - both partitions

1# - partition A

2# - partition B

Triggering the alarm from keypad

fire alarm - press and hold down the ***** key for approx. 3 sec.

panic alarm - press and hold down the **#** key for approx. 3 sec.

auxiliary alarm - press and hold down the **0** key for approx. 3 sec.

Entering the user menu

[CODE]*

Starting the user functions

[CODE]***1** – Change own code

[CODE]***2** – Add user

[CODE]***3** – Erase user

[CODE]***4** – Bypass zones

[CODE]***5** – Arming silent

[CODE]***6** – Set time

[CODE]***7** – MONO outputs activate

[CODE]***8** – BI outputs switch

[CODE]***9** – Supply reset

[CODE]***0** – Telephone DOWNLOADING start

Enabling/disabling the CHIME signal

press and hold down the **8** key for approx. 3 sec.